



4409 Hoffner Ave #237 Orlando, Florida 32812
(407) 476-2137 / 1-855-586-5391
info@bebouncehouses.com
www.bebouncehouses.com

OWNER'S MANUAL
SAFETY RULES
READ AND SAFE THESE INSTURCTIONS

WARNING THESE RULES MUST BE FOLLOWED TO AVOID ANY SERIOUS INJURY OR DEATH.

SUPERVISION BY A QUALIFIED ATTENDANT IS REQUIRED AT ALL TIMES.

Any misuse or failure to adhere to the instructions or recomendations contained in this manual will render void the 24 month warranty.

1. REMOVE choose , eyeglasses and any sharp objects.
2. Somersaults , diving ,wrestling, rught play and flips are prohibited.
3. NO food, drinks , gum ,pets or silly string .
4. Riders with mental or physical impairments SHOULD NOT be allowed to use this inflatable.
5. Exit if the unit begins lose air. USE exit doors and escape hatches.
6. DO NOT use and inmediateky deflate the inflatable the winds exceed 15mph and/ori t rains.
7. Rangers SHOULD all be of compatible age and size.

AGES 3 AND UP ONLY

8. The inflatable MUST be securly tied down.
9. Keep children away from the blower at all times.
10. Children SHOULD NOT jump on to or off the inflatable. They MUST bounce away from others and away from the sides.

CAUTION : This is an electrically operated product. Not recommended for children under 3 years of age. As with all electric products, precautions should be taken during handling and use to prevent electric shocks. The Blower requires a GROUND fault protected circuit (GFCI). Please refer to the blower manufacturer Owner's Manual for safety and operational instructions

SET UP

Set up, installation, deflation and handling should be done by QUALIFIED ATTENDANT ONLY.

The inflatable may weigh over 200 Lbs. Caution should be exercised when lifting and handling the equipment.

1. DO NOT set up in windy or rainy days.
2. Select a level area that is the safe distance from water, walls and other obstructions.
3. Make certain that better know overhead the utility wires and ground obstacles such as protruding sprinkles or underground pipes of any kind before laying the protecting tarp on the selected area.
4. Place the inflatable in the middle of the tarp and unroll the units after removing the straps. (image)
5. Connect either hose snugly (choose the one closest to the electricity source) to the blower using the strap attached to the hose. Make sure that all intake openings of the blower are free from any obstructions. (image)
6. Twist the vents (the extra hose/s) several times, fold it over unsecured snugly with the attached strap. (image)
7. Approximately one foot from each tie down double-loop of the BE Bounce Houses units, drive an anchor to the ground at 45° angle with the head pointing away from the BE Bounce Houses units. Secure the BE Bounce Houses units at all times to the corresponding number of anchors. Use the straps to attach the anchors to all the double loops as provided in specific areas on the base of the BE Bounce Houses units. Large units with high profiles (giant slides, etc) have additional tie down loops that are located at higher points. Each of these additional locations should also be attached to the anchor at a 45° angle.

When the unit is on hard surface (concrete, Wood floors, etc.), use a sand bag with adequate weights for the anchor. (image)

8. Plug the blower into the closest properly grounded (GFCI) 110V outlet only after you carefully read the blower manufacturer's safety instructions. Turn the switch on and wait (approximately 2 min. until the inflatable is fully inflated and the equipment and all parts have been examined for potentially unsafe conditions before letting children in the inflatable.
9. This unit requires continuous air pressure. Do not turn on the blower off when children are in the inflatable.

INFLATION PROCEDURES

1. Make sure there are no children inside or around the BE Bounce Houses unit before you turn the switch off and unplug the blower.
2. Disconnect the air hose from the blower and untie the extra hose/s. Let all hoses lie parallel to each other so the air can escape freely.
3. As the BE Bounce Houses unit deflates, arrange the columns to fall on top of the base making sure that the deflated units are evenly spread out. (image)

4. **Standing in front of the BE Bounce Houses unit (Entrance), fold the left side and the right side so that they meet in the middle and then fold one side over the other. (Image)**
5. **Roll the BE Bounce Houses unit towards the air hoses and then tuck the air hoses into the roll. (Image)**
6. **Secure the roll with each strap tied into a slip knot.**
7. **Store the unit in a dry area.**

MAINTENANCE PROCEDURES

1. **It is recommended to clean the BE Bounce Houses unit after each use.**
2. Use mild dish-washing liquid and clean rags for general clean-up, preferably while the BE Bounce Houses unit is inflated.
3. Never use solvent-based cleaners to avoid damaging the fabric and printing.
4. Make sure the blower and the BE Bounce Houses unit are completely dry before rolling up and storing.

REPAIR PROCEDURES

1. To repair holes and tears up to 12", use the 'Single Patch Method', utilizing the patch repair kit provided with each BE Bounce Houses unit.
2. Cut an oval or round shape vinyl patch approximately 2" larger than the cut/tear.
3. Clean the area around the cut/tear.
4. Apply glue in the patch and on the area around the cut/tear.
5. Let the glue dry for at least 3 minutes.
6. Place the patch over the damaged area and press with your palm for 1 minute.
7. In approximately 15 minutes, the glue should dry and the BE Bounce Houses unit will be ready for inflation.